

1 year Warranty

Your 'Time to Play' time piece covered by a 1-year warranty from the date of receiving your watch. The warranty covers defects in materials and workmanship under normal use. The warranty does not cover:

- Damage caused by improper handling, accidents, or unauthorized repairs.
- Water damage beyond the specified water resistance rating.
- Normal wear and tear, such as scratches on the case or strap.
- Batteries or straps.

To claim warranty service, please provide the original purchase proof and contact the Dutch Card House Company. We will guide you through the warranty process and assist you with any necessary repairs. We hope you enjoy your Time to Play time piece. If you have any questions or require further assistance, please don't hesitate to contact the Dutch Card House Company



Oudedijk 26 | 3612 AB TIENHOVEN | THE NETHERLANDS
dutchcardhousecompany.com

USER MANUAL AND WARRANTY



Miyota 2015 Quartz Movement

This user manual will provide you with important information on how to use and maintain your 'Time to Play' watch. Please read this manual carefully before using your timepiece.

1. Movement Stopper

- Before the first use, your watch will have a movement stopper to conserve battery life.
- To activate the movement, gently pull the crown out to position III (the furthest position) and release it.
- The watch will start running, and you can set the time as mentioned in step 2.

2. Setting the Time

- Pull the crown out to position II (the middle position).
- Rotate the crown clockwise or counterclockwise to set the correct time.
- Push the crown back to position I (the original position) after setting the time.

3. Battery Replacement

- The battery in your Miyota 2015 Quartz Movement watch will last approximately 2 years.

- When the battery needs replacement, we recommend taking your watch to a certified watch technician or jeweler.
- Attempting to replace the battery yourself may void the warranty and damage the timepiece.

4. Water Resistance (3ATM)

- Your watch is water-resistant up to 3 atmospheres (ATM), which means it can withstand splashes and brief immersion in water.
- However, it is not suitable for swimming, diving, or prolonged exposure to water.
- Avoid pressing any buttons or operating the crown while the watch is in contact with water.
- If the watch gets wet, wipe it dry with a soft cloth to prevent any potential damage.

5. Care and Maintenance

- Avoid exposing your watch to extreme temperatures, strong magnetic fields, or direct sunlight for extended periods.
- To clean the watch, use a soft, lint-free cloth to wipe the case, crystal, and strap.
- Avoid using abrasive materials or harsh chemicals, as they may damage the watch's finish.
- Regularly check the watch strap for signs of wear and tear and replace it if necessary.